



XGenerations
Music Center
跨世代一體式多功能音響系統

專業限量版

XG-AA002



User Manual 說明書
albertau.shop

albertau.shop

Table of Contents

Feature	2
Matters Needing Attention	3
Panel	4
Connect	5
Remote Control	6
Basic Operation	8
Troubleshooting	11
Specification	12
Environmental Statement	13
After Sales	14

Feature

Thank you for purchasing our product. Please read this manual carefully before connecting and using this product. Please also keep this manual for future reference.

Compatible with CD, CD-R, CD-RW, MP3 Format
USB port
Bluetooth connection
Full function remote control
FM Stereo Radio Tuning

Standard Accessories

User Manual



Remote Control



FM Antenna



Battery



Power Cord



Important

Caution:

- Product appearance and limited edition serial number on packaging and printed materials are for reference only; actual shipped product prevails. This disclaimer applies to all promotional materials.
- Transfer printed materials and information.
- Please read this manual carefully before connecting and using this product. Please also retain this manual for future reference.
- Do not disassemble the casing of this product. Internal parts are not user serviceable. Repair work may only be carried out by qualified personnel.
- Please turn off the machine when not in use. If not used for a long time, please turn off the machine and cut off the AC power supply.
- This product should be kept away from heat sources and direct sunlight.
- Please keep this product away from moisture or rain.
- Liquids of any kind can cause damage to the machine.
- Please place the machine on a smooth and flat hard surface and pay attention to ventilation. Do not block the vents to avoid malfunction due to overheating.
- Please use a clean soft cloth to clean the machine casing. Do not use any chemicals or stain removers.
- This manual is for reference only, not a configuration standard.
- Only use accessories/connections specified by the manufacturer.
- If using the mains plug as a disconnect device, make sure the plug is intact.
- This device must not be exposed to dripping or splashing water, and objects containing liquids, such as vases, must not be placed on it.
- Warning not to expose the battery (battery pack or installed battery) to excessive heat, such as sunlight, fire or similar.
- If a straight-in plug is used as the disconnecting device, the disconnecting device should be readily available.
- The wired network antenna connected to this device must be isolated from the protective ground, otherwise it may cause dangers such as fire!

WARNING: Please take care to avoid battery overheating.


CAUTION: Improper battery replacement may cause explosion. Only replace the battery with the same type.

	Dangerous voltages are present within the product enclosure and touching internal parts may result in electric shock.
	Important operating instructions to be heeded by the user.
	To reduce the risk of electric shock or fire, do not remove cover. Repair work should only be performed by professionals.
	Indicates that the product is a Class 1 laser product. Lasers can cause radiation damage to the human body in direct contact.

	Alternating current (AC)
	Direct current (DC)
	Class II equipment
	Standby
	"No" (no power connected)
	Dangerous voltage


Panel

Front Panel

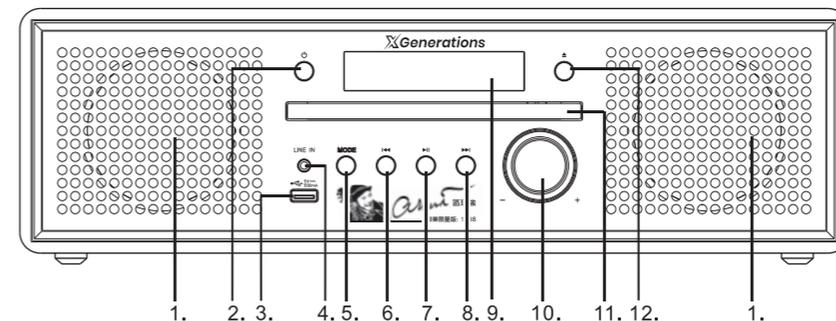

1. Speaker
2. Standby/Power
3. USB Port
4. Aux Port
5. Mode Switching
6. Previous Song
7. Play/Pause
8. Next Song
9. Display
10. Volume Adjustment
11. Disc Tray
12. Warehouse Entry and Exit

Rear Panel

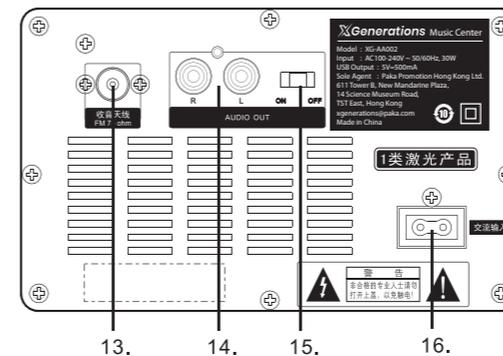

Note: In order to ensure more effective power saving in standby mode, please unplug the idle USB device connected to the product.

Connect

Bluetooth Connection


The model of the player is XG-AA002. Please press the source (MODE) button to switch to the corresponding source. After a few seconds, "BT" will flash on the screen (pairing in progress), and at the same time it will enter the state of searching for Bluetooth signals. , please use your mobile phone to search for the player (**TINGKAP CM602**) in the Bluetooth settings and enter the password 0000 (if required). At this time, "BT" will be permanently displayed on the screen, and the player will be connected to your mobile phone.

Audio Input

This machine is equipped with an additional set of audio input ports. You can connect the stereo audio output port from a VCD, CD, VCR, MP3 player to the input port (LINE IN) of this machine. The corresponding mode is LINE IN (audio input), which can be selected by pressing the mode switch on the remote control.

Audio Output

This machine supports connecting external devices such as functions or active speakers with audio cables. Before connecting external devices, turn on the audio output switch on the chassis panel. Press and hold the mode button for 2 seconds to switch to the external device for playback. Press and hold again for 2 seconds to switch to local playback. You can also switch by pressing the audio output button on the remote control.

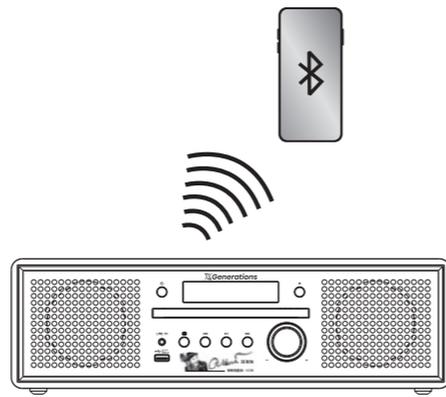


Model: XG-AA002

Remote Control


Remote Control Operation

When inserting the battery, make sure that the positive and negative poles of the battery correspond exactly to the symbols displayed on the battery compartment. Please insert the batteries into the remote control and point the remote control towards the sensor on the front panel. The effective operating distance of the remote control relative to the sensor is 8 meters, and the effective range of left and right deflection angles is 30 degrees.


Battery Installation

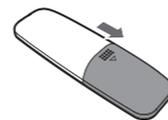

1. Remove the battery compartment cover on the back of the remote.

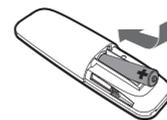

2. Insert one AAA/1.5v battery into the battery compartment. When inserting the battery, make sure that the battery poles correspond exactly to the symbols displayed on the battery compartment door.

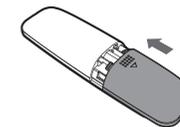


3. Put the battery compartment cover back on the remote.

Notice:

If the remote control is not used for a long time, please remove the battery. A weak battery can leak and cause serious damage to the remote. Please avoid overheating of the battery. Please dispose of batteries in an environmentally responsible manner according to government regulations.

Remote Control

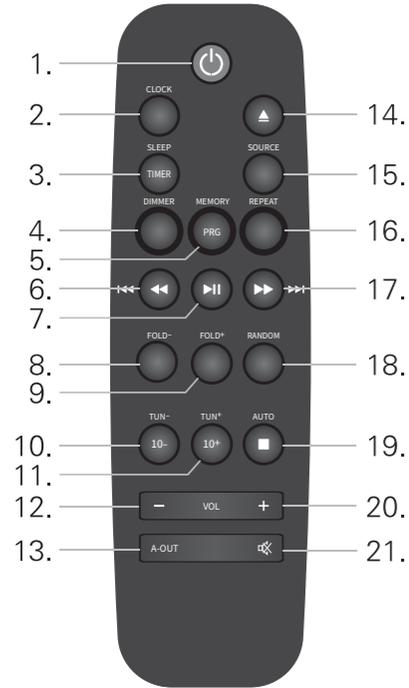

- | | |
|--------------------------|-----------------------------|
| 1. Standby | 14. Open/Close Disk Tray |
| 2. Clock | 15. Mode |
| 3. Sleep/Timer | 16. Repeat |
| 4. Adjust Brightness | 17. Fast forward/Next track |
| 5. Programming/Memory | 18. Shuffle |
| 6. Rewind/Previous track | 19. Stop/Auto Search |
| 7. Play/Pause | 20. Volume+ |
| 8. Previous Folder | 21. Mute |
| 9. Next Folder | |
| 10. 10-/FM- | |
| 11. 10+/FM+ | |
| 12. Volume- | |
| 13. Audio Output | |

Basic Operation

CD Operation

-  Press to turn on the player. Press again to put the machine into standby mode.
-  In standby mode, long press this button to enter clock mode, press []/[] button to select 12-hour or 24-hour clock format, press again to confirm, then use the []/[] button to set the clock time, press it again to confirm. Note: Only operates in standby mode
-  Press to open/close the disk tray.
-  Press repeatedly to adjust display brightness.
-  Press repeatedly to select the sleep time. Select the option SLP-OFF to turn off the sleep function. After selecting the sleep time, the player will automatically enter standby mode after the selected time. Press [] to wake up the machine. In standby mode, press and hold to enter the timer playback settings. Please press the []/[] button to set the duration, press the button again to confirm, and set the volume in the same way.
-  Press repeatedly to switch between CD, LINE IN, Bluetooth, USB, and FM modes. Press and hold for 2 seconds to switch the audio output on or off. When the audio output is switched to the on state, the host sound will be turned off; when the audio output is switched to the off state, the host will restore the sound.
-  Press to stop playback.
-  Press to temporarily stop playback. Press again to resume.
Long press for 3 seconds to disconnect Bluetooth.
-  Press to skip to the next track.
Long press to fast forward.

Basic Operation



Press to play the previous track.
Long press to rewind.



Press to turn up the volume.



Press to lower the volume.



In CD or USB mode, press the stop button [] on the remote control and then press [**MEMORY/PRG**] to enter programming mode. Press the arrows []/[] to select the desired track, and press [**MEMORY/PRG**] again to confirm the selection. Press [] to start program playback.



Press to temporarily mute the sound. Press again to turn on the sound.



Press to shuffle.



Press repeatedly to toggle repeat mode.



Each press of this button increases the number of tracks by 10.



Each press of this button reduces the number of tracks by 10.



Press to skip to the next folder.



Press to jump to the previous folder.



Press repeatedly to switch the audio output on or off. When the audio output is switched to the on state, the host sound will be turned off. When the audio output is switched to the off state, the host will restore the sound.

Basic Operation

FM Operation

The following buttons are for FM mode. Please press the mode button to select the FM radio mode.



FM+: Press to increase frequency.



FM-: Press to decrease the frequency.
Press and hold [**TUN+/-**] (FM +/-) to increase/decrease frequency continuously.



Long press for 3 seconds to automatically scan radio broadcast channels, press again to stop.



 
After tuning to a new frequency, press [**MEMORY/PRG**], then select the desired frequency by pressing the arrow []/[]. Press [**MEMORY/PRG**] again to confirm the desired station and save it as a preset station.



Press to skip to the next preset station.



Press to skip to the previous preset station.

Note: In FM radio mode, [] (volume +/-), [] (mute) buttons are also available. For details, see the CD Operation section of this chapter.

Troubleshooting

Before seeking repairs, please check the issue against the table below.

Problem	Reason	Solution
No electricity.	– The AC power cord is not connected to the power source or is not properly connected to the power source.	– Please check to make sure the AC power cord is properly connected.
There is no sound or the sound is distorted.	– The audio cable is not securely connected. – The volume is set too low. – Sound is off.	– Connect the audio cable properly. – Turn up the volume. – Press [] (Mute) on the remote control to turn on the sound. – Press [] to play/pause.
Cannot play disc.	– The disc is not set correctly on the tray. – The player is not compatible with the disc. – The disc is dirty.	– Check the disc on the tray to make sure the label side is facing up. – Clean the disc.
The player stops working when the USB drive is plugged in.	– The connected USB driver is not certified.	– The player cannot use uncertified USB drives. If the machine stops working, please turn it off and unplug it, then reconnect the plug to the power source, and turn it on again.
The buttons on the player do not work.	– The player is suffering from static electricity.	– Turn off and unplug, then reconnect the plug to the power source, and turn on again.
The remote control does not work.	– The remote control does not have batteries installed. – The battery is dead. – remote control is not facing the sensor. – The remote control is out of range. – The player is off.	– Replace the battery. – Make sure the remote is facing the sensor. – Make sure the remote control is within range. – Turn off and unplug, then reconnect the plug to the power source, and turn on again.

Specifications

Power supply	AC100-240V~, 50/60Hz	
Power consumption	30W	
Working environment	Temperature	-10°C ± 35°C
	Relative humidity	5%-90%
CD output	SNR	> 70dB (1kHz)
	Dynamic range	≥ 70dB (1kHz)
	Total harmonic distortion + Noise	≤ -60dB (1kHz)
FM	FM frequency range	87.5MHz-108MHz
Output power	15W × 2	
Frequency response	± 3db (20Hz-20kHz)	

Toxic and Hazardous Substances or Element Names and Content Marks

- This product meets the requirements of the "Administrative Measures for the Restriction of the Use of Hazardous Substances in Electrical and Electronic Products".
- During the environmental protection use period, consumers will not experience any problems affecting consumers' health such as leakage and precipitation of harmful substances during normal use, so they can use it with confidence.
- The environmental protection use period of the company's products is 10 years, and the "environmental protection use period" is valid only when the product is used under the normal conditions described in this manual. 

Part Name	Toxic and hazardous substances or elements					
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent chromium (Cr(VI))	Polybrominated biphenyls (PBB)	Polybrominated diphenyl ethers (PBDE)
Shell	○	○	○	○	○	○
Circuit boards and their components	×	○	○	○	○	○
Power cable	×	○	○	○	○	○
FM antenna	○	○	○	○	○	○
Battery	○	○	○	○	○	○
Speaker unit	○	○	○	○	○	○
Bluetooth module	○	○	○	○	○	○
Accessories	○	○	○	○	○	○

This form is prepared according to the provisions of SJ/T11364-2014

- : Indicates that the content of the toxic and hazardous substance in all homogeneous materials of the part is below the limit requirement specified in the GB/T 26572-2011 standard.
 ×: Indicates that the content of the toxic and hazardous substance in at least one homogeneous material of the part exceeds the limit requirement specified in the GB/T 26572-2011 standard.
 Remarks: Among the parts marked with "×", some of them contain hazardous substances exceeding the standard because of the limited technical level of the industry at present, and it is temporarily impossible to achieve substitution or reduction.

Warranty Information

Thank you for choosing our products! To ensure your purchasing rights, we provide the following warranty service. Please read the contents and relevant terms of this warranty statement carefully.

Warranty Period:

We offer a one-year product warranty service from the date of purchase. During this period, free repair service will be provided for any malfunctions caused by manufacturing or material defects.

Warranty Coverage:

The warranty service only applies to malfunctions caused by manufacturing or material defects. The warranty does not cover the following situations:
 Damage to the product casing: Scratches, breakages, coating peeling, and other damages to the casing are not covered by the warranty.
 Human-induced damage: Damage caused by incorrect usage, abuse, accidental drops, liquid damage, and other human factors.
 Self-disassembly or repairs: Please refrain from disassembling or repairing the product by yourself to avoid damaging the product and affecting the warranty eligibility.

Repair Service:

Customers are required to bring or send the product to our company's repair center.

Customer Service Email: xgenerations@paka.com

WhatsApp: (852) 6436-8383

Weixin: AAu8013

Address: Room 611, 6th Floor, Tower B, New Mandarin Plaza, 14 Science Museum Road, Tsim Sha Tsui, Kowloon, Hong Kong.

Website: albertau.shop

Note: The repair terms are subject to the latest announcement from our company. If the product is updated or upgraded, the contents of this manual and the product specifications may change without prior notice. The pictures are for reference only; please refer to the actual product.

目錄

特徵	16
注意事項	17
面板	18
連接	19
遙控器	20
基本操作	22
故障解決	25
規格	26
環保聲明	27
售後	28

特徵

感謝您購買我們的產品。請在連接和使用本產品之前認真閱讀本手冊。亦請保留本手冊，以供日後查閱。

兼容 CD、CD-R、CD-RW、MP3 的格式
USB 端口
藍牙連接
全功能遙控器
FM 立體聲無線電調頻

標準配件

說明書



遙控器



FM 天線



電池



電源線



注意事項

請注意：

- 包裝及印刷品上之產品外觀和限量版序號僅供參考，請以實際出貨產品為準。此免聲明適用於所有宣傳印刷材料和信息。
- 請在連接和使用本產品之前認真閱讀本手冊。亦請保留本手冊，以供未來查閱。
- 請勿拆開本產品的外殼。用戶無法自行維修內部部件。維修工作僅能由專業人員執行。
- 不使用時請關閉機器。如長時間不使用，請關閉機器並切斷AC電源。
- 本產品應遠離熱源，亦應避免陽光直射。
- 請避免本產品受潮或雨淋。
- 任何類型的液體均會導致機器受損。
- 請將機器放置於光滑平整的堅硬表面上，注意通風。請勿擋住通風孔，以避免因過熱而發生故障。
- 請使用乾淨的軟布清潔機器外殼。請勿使用任何化學品或去污劑。
- 本手冊僅為使用參考，而並非配置標準。
- 僅能使用製造商所指定的配件/連接件。
- 如將電源插頭作為斷開裝置使用，請確保插頭是完好的。
- 不得將本設備暴露於滴水或濺水的地方，並且不得在其上放置裝有液體的物品，例如花瓶。
- 警告不要將電池(電池組或已安裝的電池)暴露在過熱的環境中，例如陽光，火或類似物。
- 將直插式的插頭作斷開設備，則斷開設備應可以隨時使用。
- 接入本設備的有線網絡天線必須與保護接地隔離，否則可能會引起著火等危險！


警告：請注意避免電池過熱。

小心：不當更換電池有可能會導致爆炸。僅能更換為相同類型的電池。

	表示產品外殼內存在危險電壓，觸碰內部部件有可能會導致觸電。		表示交流電 (AC)
	表示需由用戶留意的重要操作說明。		表示直流電 (DC)
	為降低觸電或起火風險，請勿拆開外殼。維修工訴僅能由專業人員執行。		表示二類設備
	表示產品屬於1類激光產品。激光可對直接接觸的人體產生輻射傷害。		表示待機
			表示 "No" (未接電)
			表示危險電壓


面板

前面板

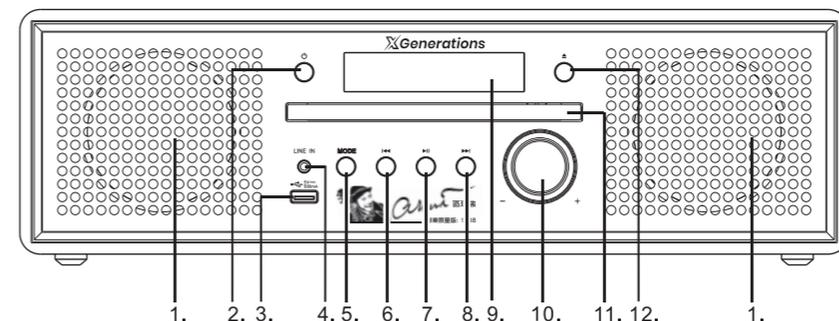

1. 喇叭
2. 待機/電源
3. USB端口
4. 音頻輸入端口
5. 模式切換
6. 上一曲
7. 播放/暫停
8. 下一曲
9. 顯示屏
10. 音量調節
11. 碟片盤托
12. 進出倉

後面板

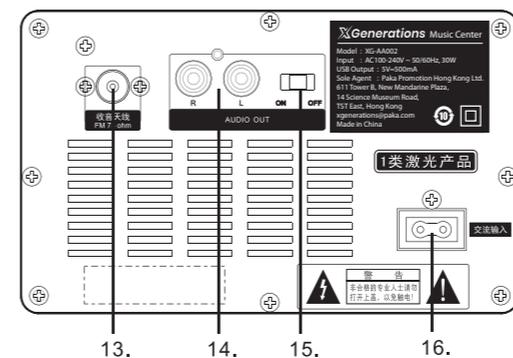


注意：為確保在待機模式下更有效的節省電源，請拔下連接在產品上閒置的USB設備，待機模式不支持連接USB設備。

連接

藍牙連接

播放器的型號為XG-AA002，請按下信源(MODE)按鈕，以切換至對應的信源，數秒後，屏幕上就會顯示「BT」閃爍(配對中)，同時進入搜索藍牙信號狀態，請使用您的手機在藍牙設置中搜索播放器(**TINGKAP CM602**)，然後輸入密碼 0000(如需要)。此時，「BT」將會常亮顯示在屏幕上，並且播放器將會與您的手機相連。

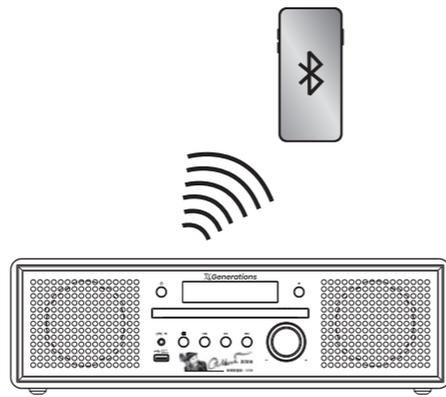

型號：XG-AA002

音頻輸入

本機器配備有一組額外的音頻輸入端口。您可以輸入來自諸如VCD、CD、VCR、MP3播放器的立體聲音頻輸出端口與本機器的輸入端口(LINE IN)相連。對應的模式為LINE IN(音頻輸入)，可通過在遙控器上按下模式切換的方式進行選擇。

音頻輸出


本機器支持用音頻綫連接功效或有源音箱等外接設備。連接外接設備前將機箱面板上的音頻輸出開關打開，長按模式鍵2秒可切換到外接設備播放，再次長按2秒可切換到本機播放。也可以通過按下遙控器音頻輸出鍵進行切換。

遙控器

遙控器操作

在裝入電池時，請確保電池的正負極與電池艙所顯示的符號準確對應。請將電池插入於遙控器中，請將遙控器朝向前面板上的感應器。遙控器相對於感應器的有效操作距離為8米，且左右有效偏角範圍均為30度。


電池安裝

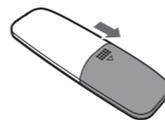

1. 拆下遙控器背部的電池艙蓋。



2. 將一節AAA/1.5V電池裝入電池艙中。在插入電池時，且確保電池的電極是與電池艙門所顯示的符號準確對應的。

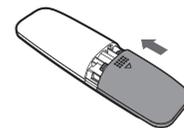

3. 將電池艙蓋重新裝回遙控器上。

注意：


如長時間不使用遙控器，請拆下電池。

電量不足的電池會漏電，並導致遙控器嚴重受損。

請避免電池過熱。

請按照政府規定以環保的方式處置電池。

遙控器

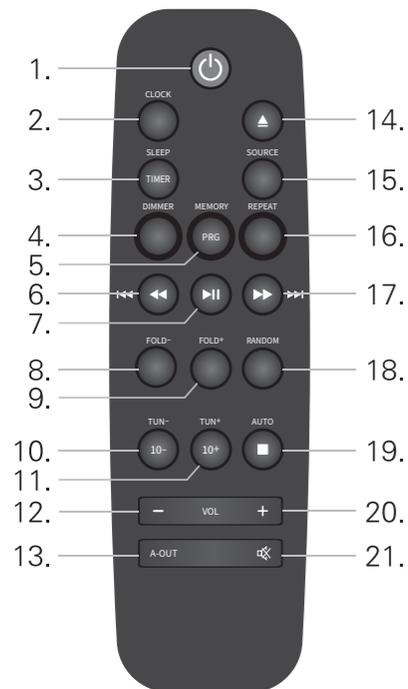

- | | |
|-------------|-------------|
| 1. 待機 | 14. 進出倉 |
| 2. 時鐘 | 15. 模式切換 |
| 3. 睡眠/定時 | 16. 重復 |
| 4. 調節亮度 | 17. 快進/下一曲 |
| 5. 編程/記憶 | 18. 隨機播放 |
| 6. 快退/上一曲 | 19. 停止/自動搜台 |
| 7. 播放/暫停 | 20. 音量+ |
| 8. 上一個文件夾 | 21. 靜音 |
| 9. 下一個文件夾 | |
| 10. 10-/調頻- | |
| 11. 10+/調頻+ | |
| 12. 音量- | |
| 13. 音頻輸出 | |

基本操作

CD 操作

-  按下即可打開播放器。再次按下即可使機器進入待機模式。
-  在待機模式下，長按此按鈕即可進入時鐘模式，按下[◀◀]/[▶▶]按鈕即選擇12小時或24小時時鐘格式，再次按下以進行確認，然後使用[◀◀]/[▶▶]按鈕設置時鐘的時間，再次按下即可確認。注意：僅能在待機模式下操作
-  按下即可打開/關閉碟片盤托。
-  反復按下即可調節顯示器亮度。
-  反復按下即可選擇睡眠時間，選擇選項SLP-OFF即可關閉睡眠功能，選項睡眠時間後，播放器將會在所選擇的時間結束後自動進入待機模式。按[◻]喚醒機器。
在待機模式下，長按住即可進入定時播放設置。請按下[◀◀]/[▶▶]按鈕設置時長，再次按該按鍵確認，通過相同方法設置音量。
-  反復按下即可切換CD、LINE IN、藍牙、USB、FM調頻模式。長按2秒即可切換音頻輸出開啓或音頻輸出關閉，當切換到音頻輸出開啓狀態時，主機聲音會被關閉；當切換到音頻輸出關閉時，主機會恢復聲音。
-  按下即可停止播放。
-  按下即可臨時停止播放。再次按下即可恢復。
長按3秒鐘，即可斷開藍牙。
-  按下即可跳至下一首。
長按即可快進。

基本操作



按下即可播放上一首。
長按即可倒退。



按下[**VOL +**] (音量+) 即可調高音量。



按下[**VOL -**] (音量-) 即可調低音量。



在CD或USB模式下，按下遙控器的停止鍵[]，再按下[**MEMORY/PRG**]，即可進入編程模式。按下箭頭[**◀◀**]/[**▶▶**]即可選擇所需要的曲目，再次按下[**MEMORY/PRG**]即可對選擇加以確認。按下[**▶▶**]即可開始編程播放。



按下即可臨時關閉聲音。再次按下即可打開聲音。



按下即可隨機播放。



反復按下即可切換重複模式。



每次按下此按鈕可增加10個曲目。



每次按下此按鈕可減少10個曲目。



按下即可跳至下一文件夾。



按下即可跳至上一文件夾。



重復按下即可切換音頻輸出開啓或音頻輸出關閉，當切換到音頻輸出開啓狀態時，主機聲音會被關閉，當切換到音頻輸出關閉時，主機會恢復聲音。

基本操作

調頻操作

下列按鈕是用於調頻模式的。請按下模式切換，以選擇FM調頻模式。



調頻+：按下即可提高頻率。



調頻-：按下即可降低頻率。
按住[**TUN+/-**] (調頻+/-) 即可持續提高/降低頻率。



長按3秒即可自動掃描無線電廣播頻道，再次按下即可停止。



 
在調至新的頻率後，按下[**MEMORY/PRG**]，然後通過按下箭頭[**◀◀**]/[**▶▶**]的方式選擇所需要的電台，再次按下[**MEMORY/PRG**]即可確認並保存為預設電台。



按下即可跳至下一預設電台。



按下即可跳至上一預設電台。

注意：在調頻模式下，[] (音量+/-)、[] (靜音) 按鈕亦是可使用的。
欲瞭解詳情，請查看本章的CD操作部分。

故障解決

在尋求維修之前，請按照下表自行檢查。

問題	原因	解決方案
沒有電。	- AC電源線並未與電源相連或並未與電源妥善相連。	- 請檢查，以確保AC電源線是妥善連接的。
沒有聲音或聲音失真。	- 音頻線連接不牢靠。 - 音量設置過低。 - 聲音已關閉。	- 妥善連接音頻線。 - 調高音量。 - 在遙控器上按下[] (靜音)，以打開聲音。 - 按下[] 播放/暫停。
無法播放光盤。	- 光盤放置於盤托上的方式不正確。 - 播放器與光盤不兼容。 - 光盤過髒。	- 檢查盤托上的光盤，以確保帶標籤的一面是朝上的。 - 清潔光盤。
在插入USB驅動時播放器停止工作。	- 所連接的USB驅動未經認證。	- 播放器無法使用未經認證的USB驅動。如機器停止工作，請關機並拔下插頭，然後重新將插頭與電源相連，並重新開機。
播放器上的按鈕無法使用。	- 播放器受到靜電干擾。	- 關機並拔下插頭，然後重新將插頭與電源相連，並重新開機。
遙控器無法使用。	- 遙控器未安裝電池。 - 電池沒有電。 - 遙控器並朝向感應器。 - 遙控器超出有效範圍。 - 播放器已關機。	- 安裝一節AAA/1.5v電池。 - 更換新電池。 - 確保遙控器是朝向感應器的。 - 確保遙控器未超過有效範圍。 - 關機並拔下插頭，然後重新將插頭與電源相連，並重新開機。

規格

電源	AC100-240V~, 50/60Hz	
消耗功率	30W	
工作環境	溫度	-10°C ± 35°C
	相對濕度	5%-90%
光盤輸出	信噪比	> 70dB (1kHz)
	動態範圍	≥ 70dB (1kHz)
	總諧波失真+噪音	≤ -60dB (1kHz)
調頻	FM 頻率範圍	87.5MHz-108MHz
輸出功率	15W × 2	
頻率響應	± 3db (20Hz-20kHz)	

有毒有害物質或元素名稱及含量標誌

• 本產品滿足《電器電子產品有害物質限制使用管理辦法》的要求。

• 在環保使用期限內，消費者在正常使用過程中不會出現有害物質洩漏、析出等影響消費者健康的問題，可以放心使用。

• 本公司產品環保使用期限為10年，只有在本說明書所述的正常情況下使用產品時，「環保使用期限」才有效。 

部件名稱	有毒有害物質或元素					
	鉛 (Pb)	汞 (Hg)	鎘 (Cd)	六價鉻 (Cr(VI))	多溴聯苯 (PBB)	多溴二苯醚 (PBDE)
外殼	○	○	○	○	○	○
線路板及其組件	×	○	○	○	○	○
電源線	×	○	○	○	○	○
FM天線	○	○	○	○	○	○
電池	○	○	○	○	○	○
喇叭單元	○	○	○	○	○	○
藍牙模塊	○	○	○	○	○	○
附件	○	○	○	○	○	○

本表格依據SJ/T11364-2014的規定編制

○：表示該有毒有害物質在該部件所有均質材料中的含量均在GB/T 26572-2011標準規定的限量要求以下。

×：表示該有毒有害物質至少在該部件的某一均質材料中的含量超出GB/T 26572-2011標準規定的限量要求。

備注：以上標「×」的部件中，部分含有有害物質超標是由於目前行業技術水平有限，暫時無法實現替代或減量化。

音響產品保修說明

感謝您選購我們的產品！為了確保您的購買權益，我們提供以下保修服務。請仔細閱讀本保修說明書的內容和相關條款。

保修期限：

自購買日期起提供一年的產品保修服務。在此期間內，若產品出現任何因製造或材料缺陷引起的故障將提供免費維修服務。

保修範圍：

保修服務僅適用於因製造或材料缺陷引起的故障。保修不包括以下情況：

1. 產品外殼損壞：外殼的刮傷、破損、塗層脫落等損壞不在保修範圍之內。
2. 人為損壞：包括但不限於不正確使用、濫用、意外摔落、液體損害等人為因素引起的損壞。
3. 自行拆解或維修：請勿自行拆解或修理，以免損壞產品並影響保修資格。

維修服務：顧客請自攜或寄送產品至本公司維修中心。

售後客服電郵：xgenerations@paka.com

WhatsApp：[\(852\) 6436-8383](tel:85264368383)

微信：[AAu8013](https://www.wechat.com/p/AAu8013)

保修地址：[香港九龍尖沙咀科學館道14號新文華中心B座6樓611室](https://www.albertau.shop)

網站：[albertau.shop](https://www.albertau.shop)

附註：維修條款以本公司最後公報為準。若產品更新升級，本說明書的內容及產品規格可能有變更，恕不另行通知。圖片僅供參考，請以實物為準。

目录

特征	30
注意事项	31
面板	32
连接	33
遥控器	34
基本操作	36
故障解决	39
规格	40
环保声明	41
售后	42

特征

感谢您购买我们的产品。请在连接和使用本产品之前认真阅读本手册。亦请保留本手册，以供日后查阅。

兼容 CD、CD-R、CD-RW、MP3的格式
USB端口
蓝牙连接
全功能遥控器
FM立体声无线电调频

标准配件

说明书



遥控器



FM天线



电池



电源线



注意事项

请注意：

- 包装及印刷品上之产品外观和限量版序号仅供参考，请以实际出货产品为准。此免责声明适用于所有宣传印刷材料和信息。
- 请在连接和使用本产品之前认真阅读本手册。亦请保留本手册，以供未来查阅。
- 请勿拆开本产品的外壳。用户无法自行维修内部部件。维修工作仅能由专业人员执行。
- 不使用时请关闭机器。如长时间不使用，请关闭机器并切断AC电源。
- 本产品应远离热源，亦应避免阳光直射。
- 请避免本产品受潮或雨淋。
- 任何类型的液体均会导致机器受损。
- 请将机器放置于光滑平整的坚硬表面上，注意通风。请勿挡住通风孔，以避免因过热而发生故障。
- 请使用干净的软布清洁机器外壳。请勿使用任何化学品或去污剂。
- 本手册仅为使用参考，而非配置标准。
- 仅能使用制造商所指定的配件/连接件。
- 如将电源插头作为断开装置使用，请确保插头是完好的。
- 不得将本设备暴露于滴水或溅水的地方，并且不得在其上放置装有液体的物品，例如花瓶。
- 警告不要将电池(电池组或已安装的电池)暴露在过热的环境中，例如阳光，火或类似物。
- 将直插式的插头作断开设备，则断开设备应可以随时使用。
- 接入本设备的有线网络天线必须与保护接地隔离，否则可能会引起着火等危险！

警告： 请注意避免电池过热。


小心： 不当更换电池有可能会引起爆炸。仅能更换为相同类型的电池。

	表示产品外壳内存在危险电压，触碰内部部件有可能会引起触电。
	表示需由用户留意的重要操作说明。
	为降低触电或起火风险，请勿拆开外壳。维修工诉仅能由专业人员执行。
	表示产品属于1类激光产品。激光可对直接接触的人体产生辐射伤害。

	表示交流电 (AC)
	表示直流电 (DC)
	表示二类设备
	表示待机
	表示 "No" (未接电)
	表示危险电压


面板

前面板

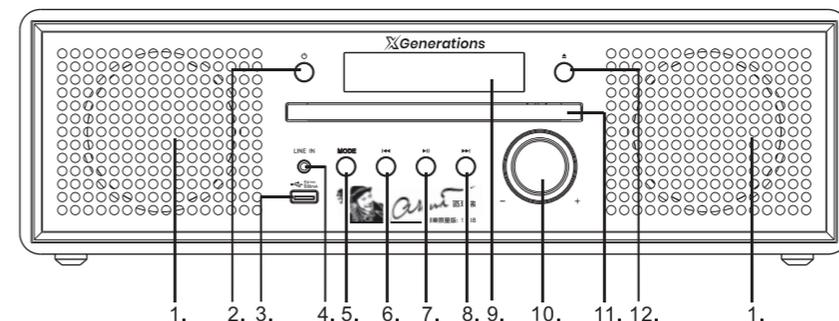

1. 喇叭
2. 待机/电源
3. USB端口
4. 音频输入端口
5. 模式切换
6. 上一曲
7. 播放/暂停
8. 下一曲
9. 显示屏
10. 音量调节
11. 碟片盘托
12. 进出仓
13. FM天线
14. 音频输出接口
15. 音频输出开关
16. AC电源接口

后面板

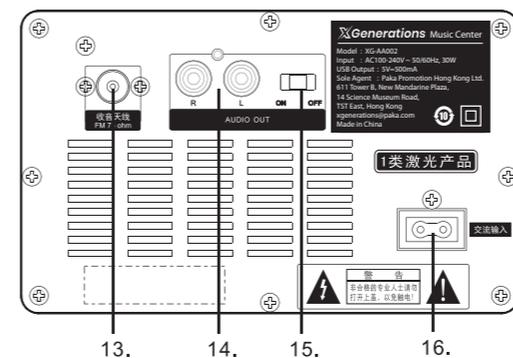


注意：为确保在待机模式下更有效的节省电源，请拔下连接在产品上闲置的USB设备，待机模式不支持连接USB设备。

连接

蓝牙连接

播放器的型号为XG-AA002, 请按下信源(MODE)按钮, 以切换至对应的信源, 数秒后, 屏幕上就会显示“BT”闪烁(配对中), 同时进入搜索蓝牙信号状态, 请使用您的手机在蓝牙设置中搜索播放器 (**TINGKAP CM602**), 然后输入密码 0000 (如需要)。此时, “BT”将会常亮显示在屏幕上, 并且播放器将会与您的手机相连。

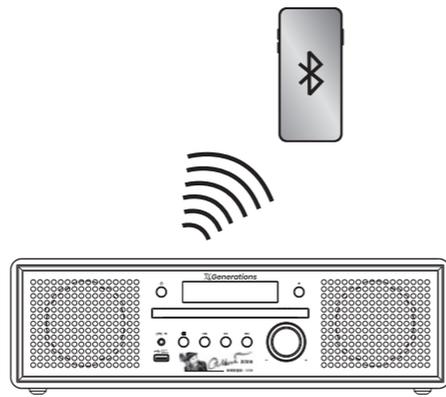

型号: XG-AA002

音频输入

本机器配备有一组额外的音频输入端口。您可以输入来自诸如 VCD、CD、VCR、MP3 播放器的立体声音频输出端口与本机器的输入端口(LINE IN)相连。对应的模式为 LINE IN (音频输入), 可通过在遥控器上按下模式切换的方式进行选择。

音频输出


本机器支持用音频线连接功效或有源音箱等外接设备。连接外接设备前先将机箱面板上的音频输出开关打开, 长按模式键2秒可切换到外接设备播放, 再次长按2秒可切换到本机播放。也可以通过按下遥控器音频输出键进行切换。

遥控器

遥控器操作

在装入电池时, 请确保电池的正负极与电池舱所显示的符号准确对应。请将电池插入于遥控器中, 请将遥控器朝向前面板上的感应器。遥控器相对于感应器的有效操作距离为8米, 且左右有效偏角范围均为30度。


电池安装

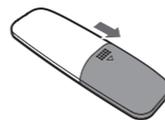

1. 拆下遥控器背部的电池舱盖。



2. 将一节AAA/1.5v电池装入电池舱中。在插入电池时, 且确保电池的电极是与电池舱门所显示的符号准确对应的。

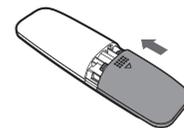


3. 将电池舱盖重新装回遥控器上。

注意:

如长时间不使用遥控器, 请拆下电池。
电量不足的电池会漏电, 并导致遥控器严重受损。
请避免电池过热。
请按照政府规定以环保的方式处置电池。

遥控器

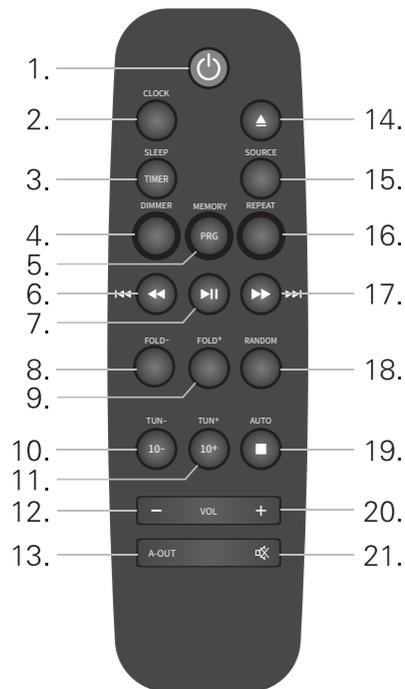

- | | |
|-------------|-------------|
| 1. 待机 | 14. 进出仓 |
| 2. 时钟 | 15. 模式切换 |
| 3. 睡眠/定时 | 16. 重复 |
| 4. 调节亮度 | 17. 快进/下一曲 |
| 5. 编程/记忆 | 18. 随机播放 |
| 6. 快退/上一曲 | 19. 停止/自动搜台 |
| 7. 播放/暂停 | 20. 音量+ |
| 8. 上一个文件夹 | 21. 静音 |
| 9. 下一个文件夹 | |
| 10. 10-/调频- | |
| 11. 10+/调频+ | |
| 12. 音量- | |
| 13. 音频输出 | |

基本操作

CD 操作

-  按下即可打开播放器。再次按下即可使机器进入待机模式。
-  在待机模式下, 长按此按钮即可进入时钟模式, 按下[◀◀]/[▶▶]按钮即选择12小时或24小时时钟格式, 再次按下以进行确认, 然后使用[◀◀]/[▶▶]按钮设置时钟的时间, 再次按下即可确认。注意: 仅能在待机模式下操作
-  按下即可打开/关闭碟片盘托。
-  反复按下即可调节显示器亮度。
-  反复按下即可选择睡眠时间, 选择选项SLP-OFF即可关闭睡眠功能, 选项睡眠时间后, 播放器将会在所选择的时间结束后自动进入待机模式。按[⏻]唤醒机器。
在待机模式下, 长按住即可进入定时播放设置。请按下[◀◀]/[▶▶]按钮设置时长, 再次按该按键确认, 通过相同方法设置音量。
-  反复按下即可切换CD、LINE IN、蓝牙、USB、FM调频模式。长按2秒即可切换音频输出开启或音频输出关闭, 当切换到音频输出开启状态时, 主机声音会被关闭; 当切换到音频输出关闭时, 主机会恢复声音。
-  按下即可停止播放。
-  按下即可临时停止播放。再次按下即可恢复。
长按3秒钟, 即可断开蓝牙。
-  按下即可跳至下一首。
长按即可快进。

基本操作



按下即可播放上一首。
长按即可倒退。



按下[**VOL +**] (音量+) 即可调高音量。



按下[**VOL -**] (音量-) 即可调低音量。



在CD或USB模式下, 按下遥控器的停止键[], 再按下[**MEMORY/PRG**], 即可进入编程模式。按下箭头[**◀◀**]/[**▶▶**] 即可选择所需要的曲目, 再次按下[**MEMORY/PRG**] 即可对选择加以确认。按下[**▶▶**] 即可开始编程播放。



按下即可临时关闭声音。再次按下即可打开声音。



按下即可随机播放。



反复按下即可切换重复模式。



每次按下此按钮可增加10个曲目。



每次按下此按钮可减少10个曲目。



按下即可跳至下一文件夹。



按下即可跳至上一文件夹。



重复按下即可切换音频输出开启或音频输出关闭, 当切换到音频输出开启状态时, 主机声音会被关闭, 当切换到音频输出关闭时, 主机会恢复声音。

基本操作

调频操作

下列按钮是用于调频模式的。请按下模式切换, 以选择FM调频模式。



调频+: 按下即可提高频率。



调频-: 按下即可降低频率。
按住[**TUN+/-**] (调频+/-) 即可持续提高/降低频率。



长按3秒即可自动扫描无线电广播频道, 再次按下即可停止。



在调至新的频率后, 按下[**MEMORY/PRG**], 然后通过按下箭头[**◀◀**]/[**▶▶**] 的方式选择所需要的电台, 再次按下[**MEMORY/PRG**] 即可确认并保存为预设电台。



按下即可跳至下一预设电台。



按下即可跳至上一预设电台。

注意: 在调频模式下, [] (音量+/-)、[] (静音) 按钮亦是可使用的。欲了解详情, 请查看本章的CD操作部分。

故障解决

在寻求维修之前,请按照下表自行检查。

问题	原因	解决方案
没有电。	- AC电源线并未与电源相连或并未与电源妥善相连。	- 请检查,以确保AC电源线是妥善连接的。
没有声音或声音失真。	- 音频线连接不牢靠。 - 音量设置过低。 - 声音已关闭。	- 妥善连接音频线。 - 调高音量。 - 在遥控器上按下[](静音),以打开声音。 - 按下[]播放/暂停。
无法播放光盘。	- 光盘放置于盘托上的方式不正确。 - 播放器与光盘不兼容。 - 光盘过脏。	- 检查盘托上的光盘,以确保带标签的一面是朝上的。 - 清洁光盘。
在插入USB驱动时播放器停止工作。	- 所连接的USB驱动未经认证。	- 播放器无法使用未经认证的USB驱动。如机器停止工作,请关机并拔下插头,然后重新将插头与电源相连,并重新开机。
播放器上的按钮无法使用。	- 播放器受到静电干扰。	- 关机并拔下插头,然后重新将插头与电源相连,并重新开机。
遥控器无法使用。	- 遥控器未安装电池。 - 电池没有电。 - 遥控器并朝向感应器。 - 遥控器超出有效范围。 - 播放器已关机。	- 安装一节AAA/1.5v电池。 - 更换新电池。 - 确保遥控器是朝向感应器的。 - 确保遥控器未超过有效范围。 - 关机并拔下插头,然后重新将插头与电源相连,并重新开机。

规格

电源	AC100-240V~, 50/60Hz	
消耗功率	30W	
工作环境	温度	-10°C ± 35°C
	相对湿度	5%-90%
光盘输出	信噪比	> 70dB (1kHz)
	动态范围	≥ 70dB (1kHz)
	总谐波失真+噪音	≤ -60dB (1kHz)
调频	FM频率范围	87.5MHz-108MHz
输出功率		15W × 2
频率响应		± 3db (20Hz-20kHz)

有毒有害物质或元素名称及含量标志

- 本产品满足《电器电子产品有害物质限制使用管理办法》的要求。
- 在环保使用期限内,消费者在正常使用过程中不会出现有害物质泄漏、析出等影响消费者健康的问题,可以放心使用。
- 本公司产品环保使用期限为10年,只有在本说明书所述的正常情况下使用产品时,“环保使用期限”才有效。⑩

部件名称	有毒有害物质或元素					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
外壳	○	○	○	○	○	○
线路板及其组件	×	○	○	○	○	○
电源线	×	○	○	○	○	○
FM天线	○	○	○	○	○	○
电池	○	○	○	○	○	○
喇叭单元	○	○	○	○	○	○
蓝牙模块	○	○	○	○	○	○
附件	○	○	○	○	○	○

本表格依据SJ/T11364-2014的规定编制

○: 表示该有毒有害物质在该部件所有均质材料中的含量均在GB/T 26572-2011标准规定的限量要求以下。
 ×: 表示该有毒有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572-2011标准规定的限量要求。
 备注: 以上标“×”的部件中,部分含有有害物质超标是由于目前行业技术水平有限,暂时无法实现替代或减量化。

音响产品保修说明

感谢您选购我们的产品!为了确保您的购买权益,我们提供以下保修服务。请仔细阅读本保修说明书的内容和相关条款。

保修期限:

自购买日期起提供一年的产品保修服务。在此期间内,若产品出现任何因制造或材料缺陷引起的故障将提供免费维修服务。

保修范围:

保修服务仅适用于因制造或材料缺陷引起的故障。保修不包括以下情况:

1. 产品外壳损坏:外壳的刮伤、破损、涂层脱落等损坏不在保修范围之内。
2. 人为损坏:包括但不限于不正确使用、滥用、意外摔落、液体损害等人为因素引起的损坏。
3. 自行拆解或维修:请勿自行拆解或修理,以免损坏产品并影响保修资格。

维修服务: 顾客请自携或寄送产品至本公司维修中心。

售后客服电邮: xgenerations@paka.com

WhatsApp: (852) 6436-8383

微信: AAu8013

保修地址: 香港九龙尖沙咀科学馆道14号新文华中心B座6楼611室

网站: albertau.shop

附注: 维修条款以本公司最后公报为准。若产品更新升级,本说明书的内容及产品规格可能有变更,恕不另行 通知。图片仅供参考,请以实物为准。